

Get the Most from X2Y® Capacitors with Proper Attachment Techniques

Summary

X2Y® capacitors excel in low inductance performance for a myriad of applications including EMI/RFI filtering, power supply bypass / decoupling. How the capacitor attaches to the application PCB is every bit as important as the capacitor itself. This application note demonstrates recommended attachment practices.

Introduction

Capacitor performance, and particularly, low inductance capacitor performance can depend heavily on the pad layout and via attachment patterns. Proper attention to layout issues insures top device performance.

Loop Inductance

Inductance always evaluates around a loop. Bypass capacitor mounted inductance is a function of the **entire physical path(s)** from the capacitor load through all interconnects. Best results are obtained by minimizing the loop area. Figure 1 illustrates the inductance loop for a bypass capacitor attached to planes well within a PCB. L1 represents the inductance of the capacitor with a **specific** land and via pattern. L2 represents the incremental inductance associated with a given via pattern and depth to the near plane in a power / ground cavity. Proper attachment techniques maximize capacitor performance by minimizing the L1 and L2 inductances.

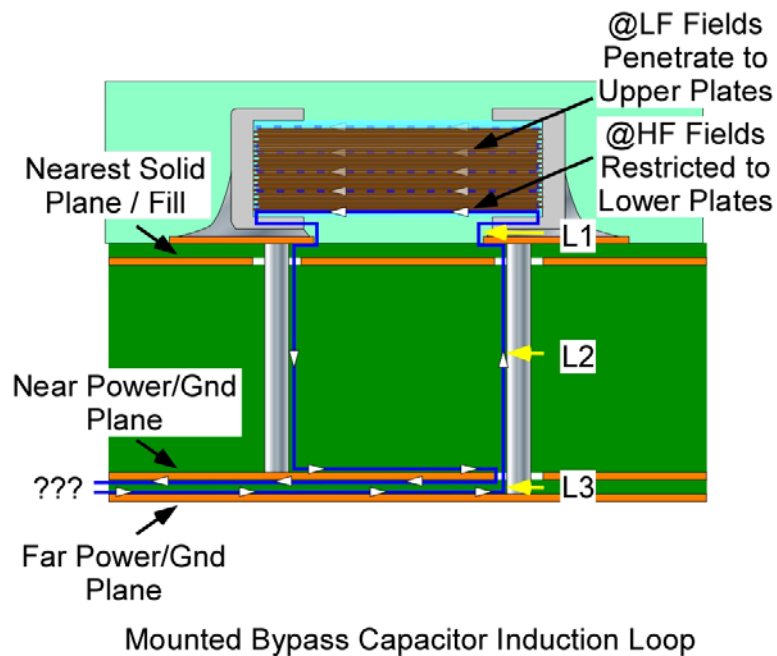


Figure 1, Bypass Capacitor Induction Loop

DISCLAIMER: Information and suggestions furnished in this document by X2Y® Attenuators, LLC are believed to be reliable and accurate. X2Y® Attenuators, LLC assumes no responsibility for its use, nor for any infringements of patents or other rights of third parties which may result from its' use. X2Y® is a registered trademark. All other brand or product names mentioned in this document are trademark or registered trademarks of their respective holders. These notes are subject to change without notice. Copyright © X2Y® Attenuators, LLC all rights reserved.

Additionally, bypass capacitor inductance is not constant with frequency. Internally, bypass capacitor plates create shields that limit high frequency penetration away from the mounting surface. This reduces inductance at high frequencies, (> 50-100MHz).

The cardinal rules of high performance land patterns:

1. Limit solder pads to only as large as necessary for good manufacturability
2. Locate vias as close to device terminals as possible.
3. Use the largest drill diameter suitable for the manufacturing process
4. Locate opposite polarity vias as close together as possible.
5. Understand the difference between finished PTH hole size and drilled hole diameter
6. Locate a solid plane or power patch as close to the capacitor surface as possible
7. Locate high performance planes close to the capacitor mounting surface
8. Always locate capacitors on the PCB surface closest to the planes they support.

Rule #1

Limit Pad Sizes. Limiting capacitor pad sizes helps to move vias closer to the device terminals and reduce inductance. Pad sizes should be chosen to allow for good solderability. Reflow soldering tolerates smaller pads than wave soldering. Reflow is preferred for low inductance. Pad extension beyond the component of 10mils is typically more than adequate to form a high quality solder meniscus.

Rule #2

Locate Vias as Close to Device Terminals as Possible. Vias should locate only as far from the capacitor as necessary to allow for solder mask dam and via clearance. Modern manufacturing typically supports a solder mask dam with a 10mil diameter annular ring over the finished hole, IE 5mil radius over finished hole radius.

Rule #3

Use the Largest Drill Diameter Suitable for the Manufacturing Process. The ratio of the **outside** via hole diameter to the center to center spacing determines self inductance for each via pair. Particularly for planes buried deep within a board optimizing vias affords significant gains. Via drill diameter should be chosen as large as possible without:

- Unduly pushing vias away from capacitor terminals

- Unduly blocking signal routing channels
- Unduly causing large plane perforations

At the same time that larger vias reduce the induction loop size inside the PCB, minimum edge to edge solid material requirements dictates pushing vias apart as they grow. This slowly increases mounted inductance due to the longer path on the capacitor surface of the PCB. Additionally, as vias grow, antipads should not be allowed to grow to the point that they run together.

Rule #4

Locate Opposite Polarity Vias as Close Together as Possible. Just as maximizing tolerable The ratio of via diameter to center-to-center spacing determines self inductance by a logarithmic relationship. With smaller X2Y capacitors, locating the vias as close to the device as possible also tends to minimize distance between vias. On larger X2Y parts, eight via patterns should be used, so as to create a via pair across each of the four device corners.

Rule #5

Understand the Difference Between Via Drill and Finished Hole Diameter. Most PCB houses specify finished hole diameter, and do so with a fairly wide tolerance, typically $-.001/+0.004$ for vias. Finished hole diameters are important when they are used for through hole leads. Otherwise, they are popular because they can be verified. Whenever possible, find out from your fabrication vendor the actual drill size used for each common diameter hole. Then adjust the fabrication drawing to call out a drill diameter that meets manufacturability requirements for the selected board vendor(s). Be certain to communicate clearly to the vendor, when you want to specify a given drill, instead of just a finished hole size.

Rule #6

Locate Solid Fill / Plane Close to the Capacitor Mounting Surface. The L1 capacitor inductance is a function of the entire capacitor plus PCB feature geometry down to the first solid fill or plane that substantially surrounds the capacitor body. The plane / fill acts as shield. It does not matter what DC voltage is on the plane / fill, or even that it is connected to the capacitor. What matters is how close it is to the capacitor surface. L1 inductance is non-linear. Locating L1 within the first 10mils or so of the surface does not have a major impact on capacitor performance. However, more than 10 mils down, L1 inductance increases very rapidly.

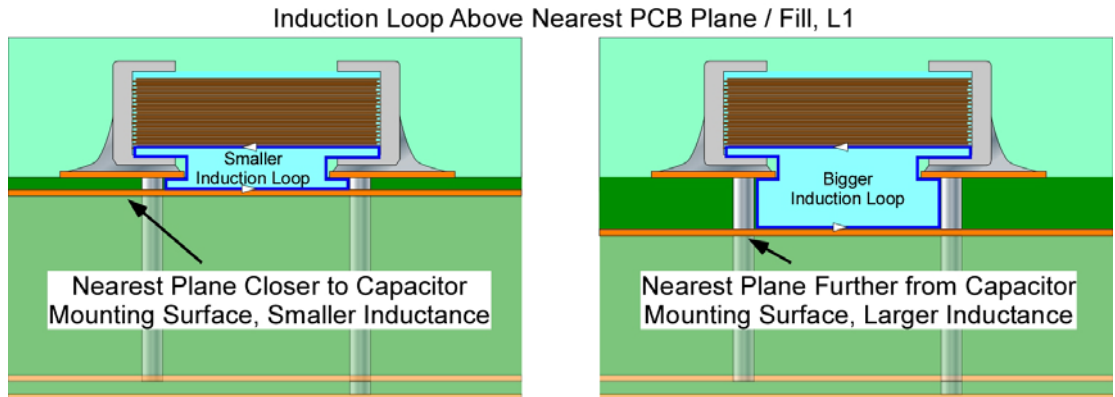


Figure 2, Bypass Capacitor Induction Path Above Uppermost Plane

Rule #7

Locate High Performance Planes Close to the Cap Mounting Surface.

Figure 1 illustrates components of attached capacitor inductance for planes buried deep within the printed circuit board. With X2Y capacitors and a good via layout, the incremental inductance of the section marked L2 typically varies from 3.3pH to 4pH / mil of the L2 cavity, depending on the specific dimensions and location of vias. A very poor layout can drive this value up over 5pH / mil.

As shown in Table 1, a power cavity on layers 6/7 requires one and half times as many capacitors as does a power cavity on layers 2/3 for the same impedance, while cavities on layers 10/11 require twice as many capacitors as layers 2/3.

Rule #8

Always Locate Capacitors on the PCB Surface Closest to the Planes. Bypass capacitors that connect to planes in the upper half of the board stack-up should be mounted on the PCB top surface, while those that connect to planes in the bottom half should be mounted on the bottom. Table 1 demonstrates that the penalty for traversing to the opposite side of the board can require nearly 3.0 times as many capacitors at low frequency, and 3.5 times as many capacitors at high frequency as when the capacitors locate on the near mounting surface. The ratio diminishes as capacitors attach to low performance cavities closer to the middle of the PCB.

Closer Plane Depth (Distance from capacitor mounting surface to closer of two planes in power cavity)	Typical Inductance	
	LF	HF
5mils	146pH	118pH
10mils	166pH	138pH
15mils	186pH	158pH
20mils	206pH	178pH
25mils	226pH	198pH
30mils	246pH	218pH
35mils	266pH	238pH
40mils	286pH	258pH
45mils	306pH	278pH
50mils	326pH	298pH
55mils	346pH	318pH
60mils	366pH	338pH
65mils	386pH	358pH
70mils	406pH	368pH
75mils	426pH	388pH
80mils	446pH	408pH
85mils	466pH	428pH
90mils	486pH	448pH
95mils	506pH	468pH
100mils	526pH	488pH
105mils	546pH	508pH
110mils	566pH	528pH
115mils	586pH	548pH

Table 1, Typical Mounted Inductance By Plane Location, X2Y® 0603

Given so many variables that are application dependent, how do capacitor manufacturers obtain data sheet ESL values? The answer is that they first measure a reference value on a fixture with a shorting plate in place of the DUT¹. Then, they measure with a DUT, typically held to the surface under compression. Manufacturers report the measured difference as data sheet ESL.

It should be apparent that this measurement reports only the incremental inductance of the capacitor body over a shorted plate. It does not report the inductance of a capacitor in any application. As such, these values are useful primarily for qualitative comparison between like geometry and terminal configuration capacitors. In order to predict bypass capacitor performance in actual applications, we need to determine the inductance of the entire loop depicted in Figure 2.

X2Y Preferred Layouts

X2Y® has developed preferred layouts based on common class II PCB manufacturing rules, and JEDEC rules for high assembly reliability.

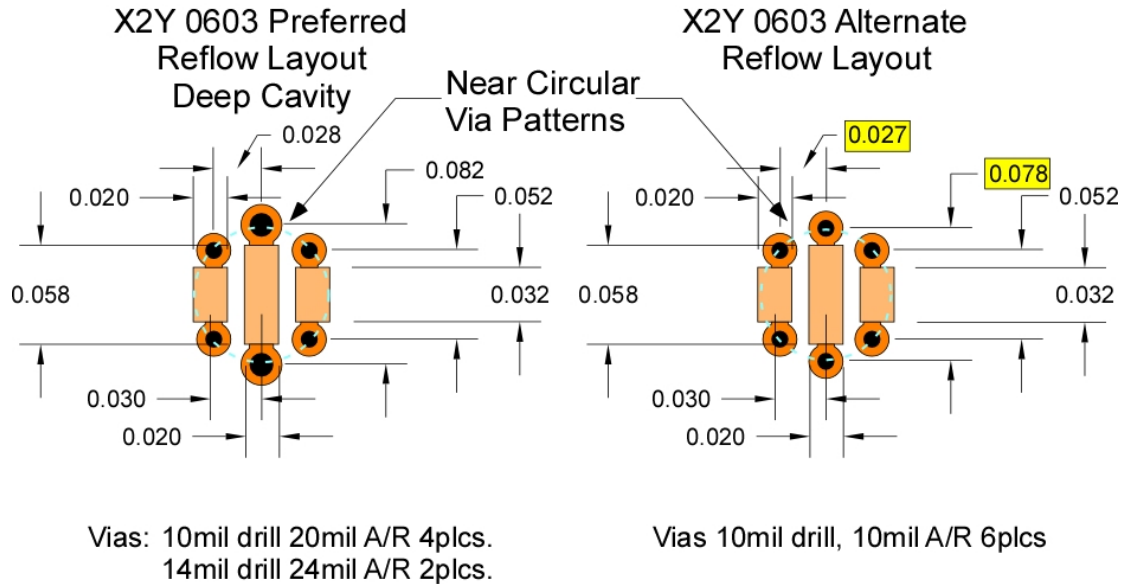


Figure 3, X2Y® 0603 Recommended Reflow Layouts

These layouts arrange pads for 10mils extension beyond capacitor terminals for good meniscus wicking. Vias push-out from the pads only by sufficient distance for reliable solder mask dams.

The preferred layout utilizes a **drill** size for G1 and G2 connections 1.4X the drill size for A/B pads. The larger drill size balances flux density, and can result in 15%-20% improved L2 inductance. The alternate layout utilizes the same size drill for all vias. When using this layout, particularly for large cavity boards, such as four or six layer X2Y® recommends connecting the A/B terminals to the far plane from the capacitor, and G1 and G2 terminals to the near plane.

Perils of Poor Layouts

A good PCB layout optimizes via placements for the capacitor used and realizes superior performance. Poor PCB layouts squander performance, requiring more capacitors, and more vias to do the same job. Figure 4, compares the X2Y® recommended alternate layout against a poor layout. Because of its long extents from device terminals to vias, and the wide via separation, the poor layout shown performs badly. It exhibits approximately 200% L1 inductance, and 150% L2 inductance compared to recommended X2Y® layouts.

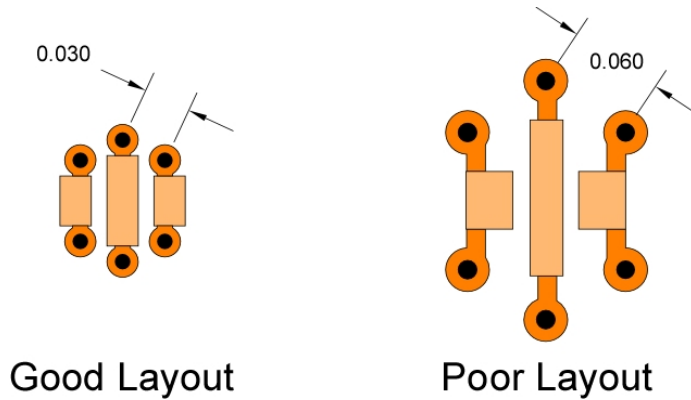


Figure 4, Comparative Layouts, X2Y 0603

**X2Y® Layouts,
Large
Capacitors**


Ordinary capacitor construction dictates that device and via loop inductances both increase as larger bodies push the terminals and vias apart. The unique perpendicular design of the X2Y® capacitor avoids these problems, because the vias and terminal connections form in pairs around the corners in an eight via pattern, maintaining minimum size loops and maximum via utilization.

Figure 5 illustrates recommended layouts for 0805, 1206, and 1812 size X2Y(4) capacitors. Note that in each case, via spacing remains the same.


RECOMMENDED LAYOUTS



X2Y 0805

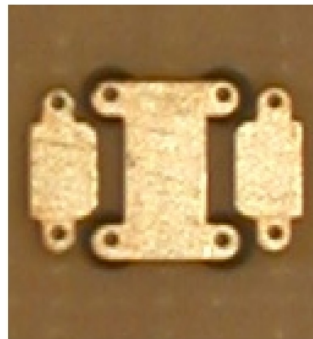

X2Y 1206

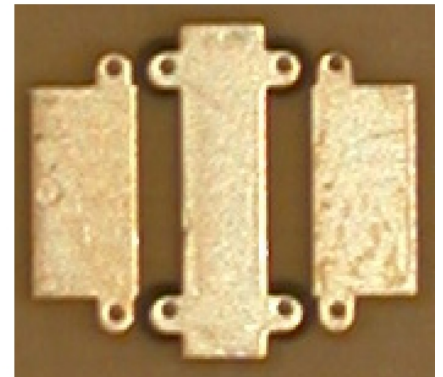

X2Y 1812

Figure 5, Recommended Layouts, Large X2Y® Caps

Independent tests confirm that X2Y® capacitor inductance actually decreases as X2Y® parts grow larger. The decrease is due to greater distance between like polarity vias, and the additional via pair.

Conclusion

Capacitor land / via patterns play a key role in the realizable performance of bypass capacitors, particularly low inductance X2Y® capacitors. Attention to: land pattern, via design, and PCB stack-up result in the fewest number of capacitors, and route blocking vias for a given PCB. X2Y® has seen gains of more than 10:1 achieved from combined use of X2Y® capacitors and well designed stack-ups, compared to conventional capacitors and poorly thought-out stack-ups.²

Contact Information

Direct inquiries and questions about this application note or X2Y products to x2y@x2y.com or telephone:



X2Y Attenuators, LLC
2730B West 21st Street
Erie, PA 16506-2972

Phone: 814.835.8180
Fax: 814.835.9047

To visit us on the web, go to <http://www.x2y.com>.

Author Acknowledgement

X2Y Attenuators, LLC would like to thank Steve Weir, Consultant with Teraspeed® Consulting Group LLC and X2Y Attenuators, LLC.

Mr. Weir has more than 20 years of industry experience and holds 17 U.S. patents. He has architected a number of packet and TDM switching products. Mr. Weir is a recognized expert in power delivery and a frequent contributor to the SI-list signal-integrity reflector.

References

¹ "TF-MP2 Inductance of Bypass Capacitors, How to Define, How to Measure, How to Simulate" "A Measurement Technique for High Frequency Low-Inductance Decoupling Capacitors", DesignCon East 2005, Joe Hock

² Note: performance results reported in this application note were achieved using patented X2Y® components sourced from licensed manufacturers, or their authorized distribution channels. Proper reference of the technology in circuit schematics, technical literature, or product sourcing documents requires use of registered trademark "X2Y®."